

BrandStand™ Video

Adjustable Dispenser Stand with Video Player


KTS1012

For Indoor Use

Quick Start Guide

Assemble Stand and Attach Dispenser:

- Attach base to lower pole using the two smaller pan head screws. Loosen plastic collar and insert upper pole/head assembly. Adjust height and tighten collar.
- Attach VersaClenz Touchless Dispenser as shown using the four remaining truss head screws.

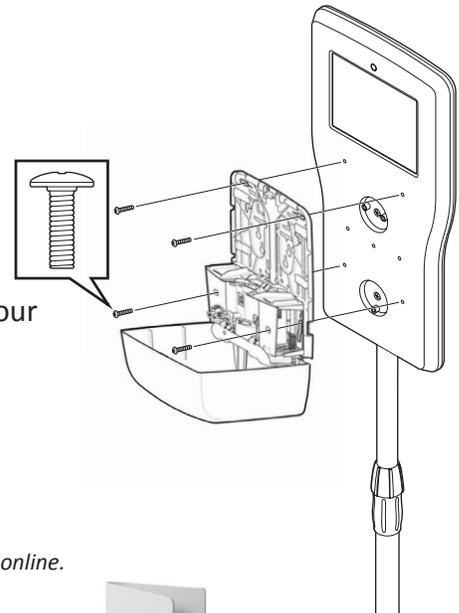

Format Files to Be Displayed:

- Photos: JPEG
- Videos: MPEG1*, MPEG2* (720x480 / below 30fps)
- Music: MP3*, WMA*

**If you don't have file conversion software, you can find free converter websites online.*

Saving Your Content:

- Create a folder named *Autoplay* on your USB drive or SD card.
- Save content to be played into Autoplay folder.



Autoplay

Getting Started:

- Insert USB drive into USB port or SD card into card slot.
- Turn unit ON.

If you have a video saved in the Autoplay folder it will automatically begin playing.

Playing Looped JPEGs:

- Press *Menu* button.
- Using the navigation wheel on back of the unit, look at the screen and select *Photo*, then select *USB*.
- Saved JPEGs will begin playing in continuous rotation.

Experiment with Transition Effects:

BrandStand Video has 35 transition effects that can add impact to your looped JPEGs. We recommend experimenting with these effects to see which one best complements your company and message.

1. Select Menu
2. Navigate to Set Up and select
3. Scroll down to Transition Effects and select
4. Navigate right to scroll through the effects library
5. Press Select to enter your selection
6. Scroll down to Exit and select
7. Navigate to Photo and select
8. Navigate to the storage device you're using and select
9. Looped images will begin playing using the transition effect you've selected

Playing Music With Looped JPEGs:

- To achieve this, place your music on the USB drive or SD card outside of the *Autoplay* folder.

To download a PDF of the complete BrandStand Video Instruction Manual go to www.gobrandstand.com